


BECKER CENTRONIC PLUS MOTOR, ADDING CENTRONIC PLUS SUN,WIND & RAIN SENSOR TO AN EXISTING INSTALLATION & SETTING PROTECTION LEVELS FLOWCHART PAGE 1 - BCPFC 005-1

SCAN HERE !



VIDEO INSTRUCTIONS

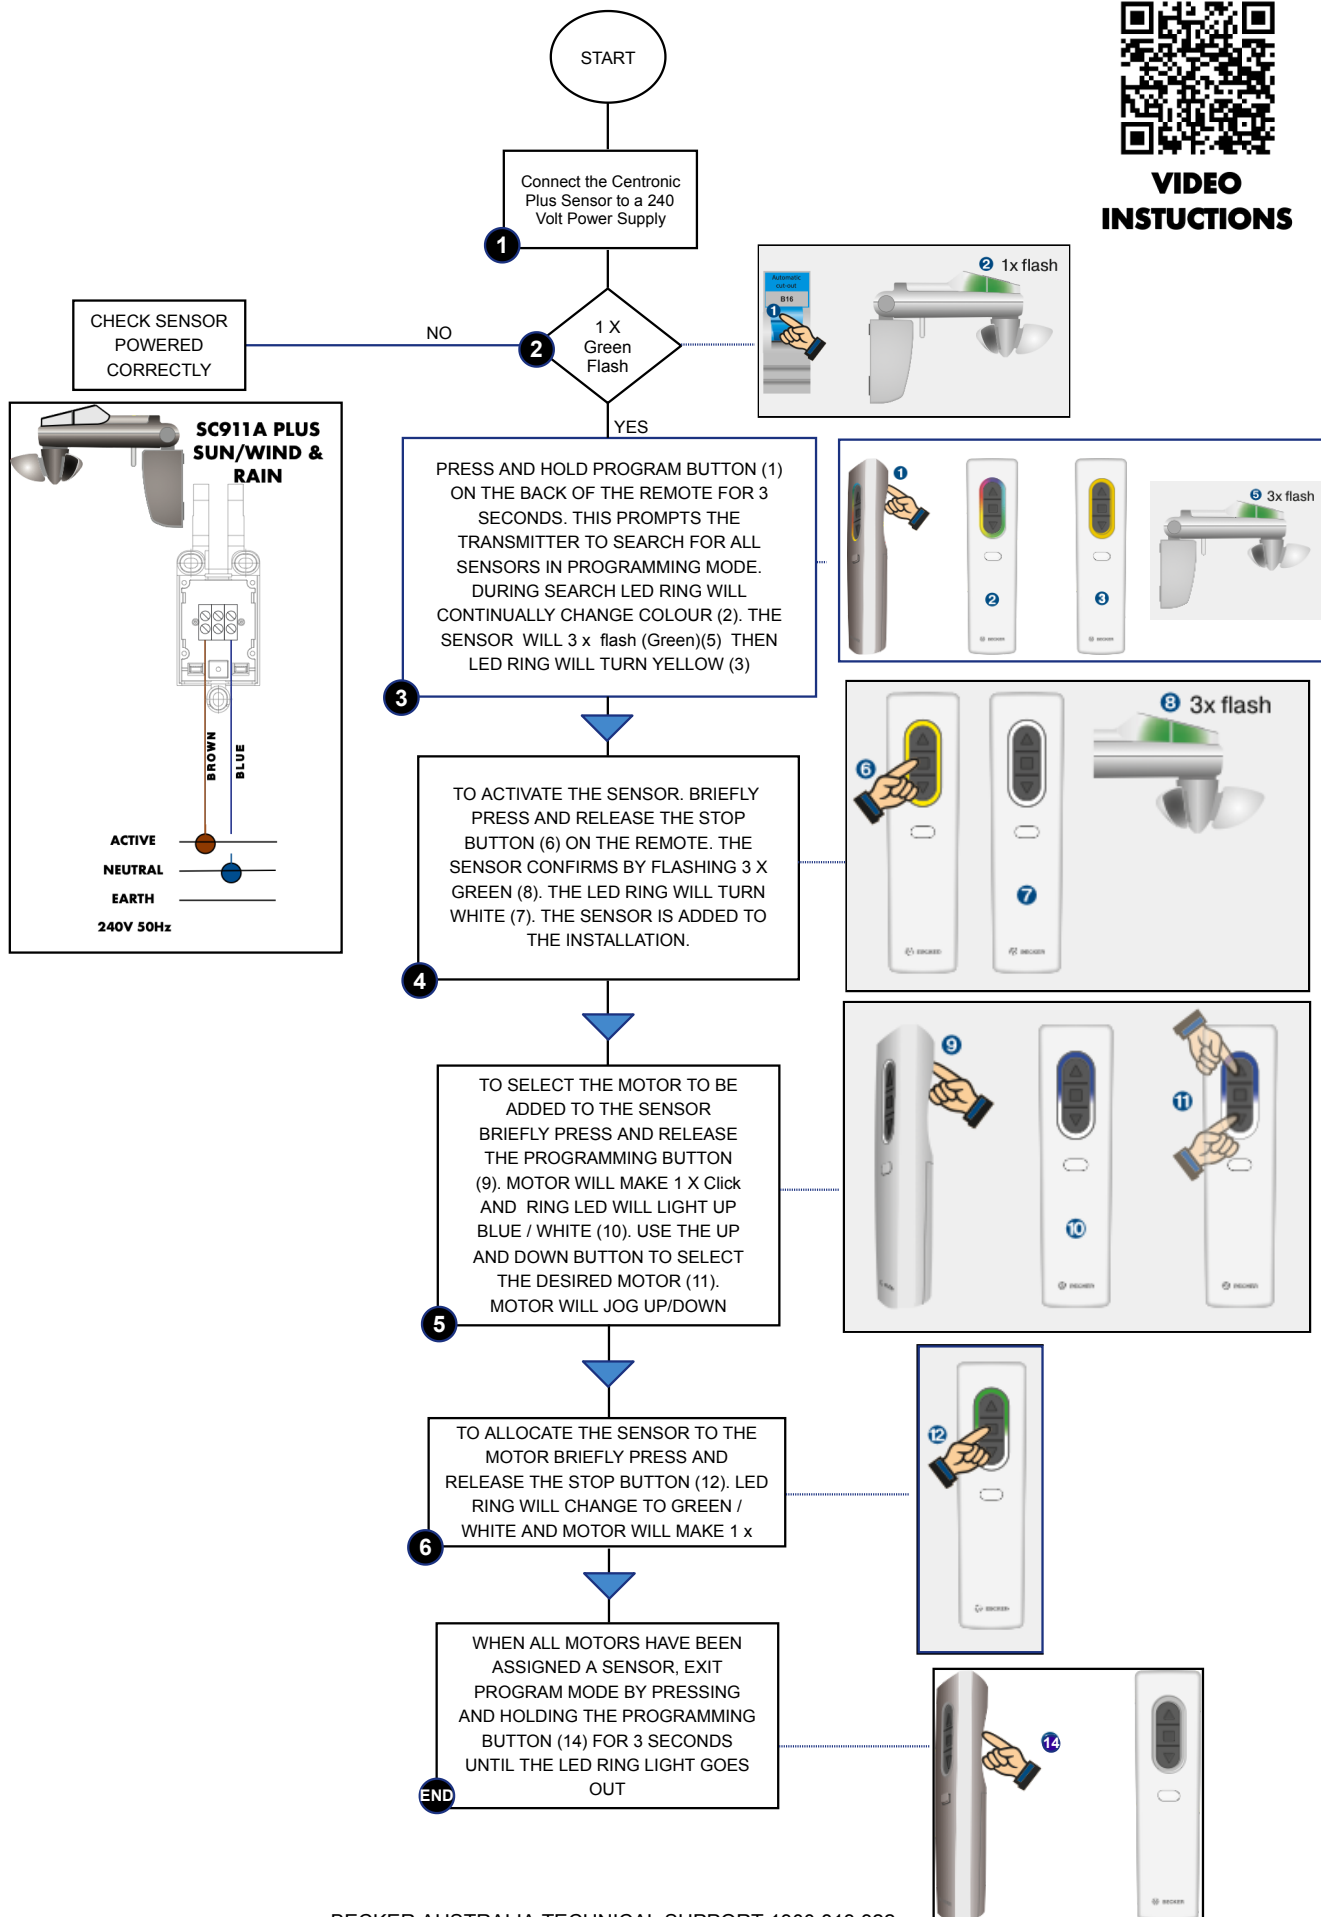

BECKER CENTRONIC PLUS MOTOR, ADDING CENTRONIC PLUS SUN, WIND & RAIN SENSOR TO AN EXISTING INSTALLATION & SETTING PROTECTION LEVELS FLOWCHART PAGE 2 - BCPFC 005-2

START: USE A SWC PLUS REMOTE ALREADY PROGRAMMED IN THE CURRENT NETWORK

CAUTION! MOTOR LIMITS MUST ALREADY BE PROGRAMMED BEFORE PROCEEDING

C12a Plus Motor, Factory Default Protection Levels:
SUN = LEVEL 7*
WIND = LEVEL 5*
RAIN = RETRACT*
 *Note: Please change according to the awning manufactures specifications

SCAN HERE !




VIDEO INSTUCTIONS

1 PRESS AND HOLD PROGRAM BUTTON (1) ON THE BACK OF THE REMOTE FOR 3 SECONDS. THIS PROMPTS THE TRANSMITTER TO SEARCH FOR ALL MOTORS AND SENSORS IN THE SAME NETWORK. DURING SEARCH LED RING WILL CONTINUALLY CHANGE COLOUR (2). THE CLOSEST MOTOR TO THE TRANSMITTER WILL MAKE 1 X JOG THEN LED RING WILL TURN GREEN (3)



2 USING THE UP AN DOWN BUTTONS SELECT THE MOTOR THAT YOU WANT TO SET THE PROTECTION LEVELS ON. AS YOU CYCLE THROUGH THE MOTORS, EACH MOTOR WILL MAKE 1 X JOG. STOP CYCLING ON THE DESIRED MOTOR AFTER MOTOR MAKES 1 X JOG.

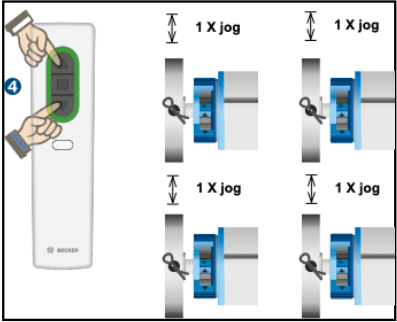


3 ENTER SETTING MODE BY PRESSING BRIEFLY THE PROGRAM BUTTON ON THE BACK OF THE REMOTE (5) LED RING WILL PULSE IN AND OUT LIGHT BLUE (6)



4 TO ENTER PROTECTION LEVEL ADJUSTMENT. PRESS AND HOLD THE FUNCTION BUTTON (7) FOR APPROX. 3 SECONDS UNTIL LED RING CHANGES TO YELLOW. THIS NOW SHOWS THE (SUN LEVEL). TO ADJUST LEVELS, USE THE UP BUTTON TO INCREASE AND DOWN BUTTON TO DECREASE (8). TO MOVE TO WIND LEVEL PRESS & RELEASE FUNCTION BUTTON BRIEFLY (9), THE LED RING WILL TURN RED (WIND LEVEL). TO MOVE TO RAIN FUNCTION PRESS AND RELEASE THE FUNCTION BUTTON BRIEFLY (10). THE LED RING WILL TURN BLUE. SEE TABLES BELOW FOR THRESHOLD LEVELS AND ADJUSTMENT.

SETTING SUN, WIND & RAIN LEVELS (SWC54XX Plus Remote)

WHEN ALL LEVELS HAVE BEEN SET. EXIT BY PRESSING AND HOLDING THE PROGRAMMING BUTTON (11) FOR 3 SECONDS UNTIL THE LED RING LIGHT GOES OUT. MOTOR MAKES

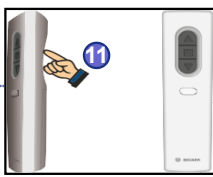

END

BECKER SUN, WIND & RAIN PROTECTIONS LEVELS

SUN THRESHOLD: 15 LEVELS															2 klux to 100 klux approx.
01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	LEVEL
02	09	16	23	30	37	44	51	58	65	72	79	86	93	100	klux approx.
OVERCAST		FULL DAYLIGHT (NOT DIRECT SUN)			DIRECT SUNLIGHT LOW TO EXTREME HIGH										



WIND THRESHOLD: 11 LEVELS											2m/s to 22 m/s approx.
01	02	03	04	05	06	07	08	09	10	11	LEVEL
7	14	22	29	36	43	50	58	65	72	79	km/h approx.



RAIN OFF/ DIRECTION		
RETRACT	OFF	EXTEND
▲	✕	▼

